

DENON®

AH-GC20

CE 0700

### **EU Regulatory Conformance**

Hereby, DENON EUROPE Division of D&M Germany GmbH An der Kleinbahn 18, Nettetal, D-41334 Germany declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Operation / Battery charging temperature range: 5 °C – 40 °C

Temperaturbereich für Betrieb/Akkuladevorgang: 5 °C – 40 °C

Plage de température de fonctionnement/pour le chargement de la batterie : 5 °C – 40 °C

Gamma di temperature di esercizio/di carica della batteria: da 5 °C a 40 °C

Intervalo de temperatura de funcionamiento/carga de la pila: 5 °C – 40 °C

Temperatuurbereik bediening / batterij opladen: 5 °C – 40 °C

Vid bruk / Temperaturintervall för batteriladdning: 5 °C – 40 °C

Диапазон рабочих температур/температур зарядки батареи: 5 °C – 40 °C

Zakres temperatur pracy / ładowania akumulatora: 5 °C – 40 °C

動作 / バッテリー充電温度範囲 : 5°C ~ 40°C

# CE 0700

## **DECLARATION OF CONFORMITY**

Our products following the provisions of EC/EU directives, that as follows;

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

## **ÜBEREINSTIMMUNGSERKLÄRUNG**

Unsere Produkte unterliegen den Bestimmungen der folgenden EG/EU-Richtlinien:

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

## **DECLARATION DE CONFORMITE**

Nos produits sont conformes aux dispositions des directives CE/UE comme suit;

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

## **DICHIARAZIONE DI CONFORMITÀ**

I nostri prodotti sono conformi a quanto previsto dalle direttive EC/EU, come specificato di seguito:

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

## **DECLARACIÓN DE CONFORMIDAD**

Nuestros productos cumplen las disposiciones de las directivas de la CE/UE siguientes:

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

## **EENVORMIGHEIDSVERKLARING**

Onze producten volgen de voorwaarden van de EG/EU-richtlijnen zoals volgt;

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

## **ÖVERENSSTÄMMELSESINTYG**

Våra produkter uppfyller följande föreskrifter i EC/EU-direktiv:

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

## **DEKLARACJA ZGODNOŚCI**

Nasze produkty zgodnie z postanowieniami KE/UE, tj.

LV: 2006/95/EC, EMC: 2004/108/EC,  
RoHS: 2011/65/EU, R&TTE: 1999/5/EC

DENON EUROPE Division of D&M Germany GmbH  
An der Kleinbahn 18, Nettetal, D-41334 Germany

## WARNINGS

Do not bend forcibly the plug on the equipment for the connection between the connector and micro USB/USB cable.

## WARNHINWEISE

Der Stecker am Gerät darf beim Anschließen des Anschlusses und Micro-USB/USB-Kabels nicht mit Gewalt gebogen werden.

## AVERTISSEMENTS

Ne pliez pas la fiche sur l'appareil en forçant pour connecter la borne au câble micro USB/USB.

## AVVERTENZE

Non piegare con forza lo spinotto sull'apparecchio per effettuare il collegamento tra il connettore e il cavo micro USB/USB.

## ADVERTENCIAS

No doble a la fuerza la clavija del equipo para la conexión entre el conector y el cable micro USB/USB.

## WAARSCHUWINGEN

Buig de stekker op het apparaat niet geforceerd voor de verbinding tussen de aansluiting en de micro-USB/USB-kabel.

## VARNINGAR

Böj inte kontakten på anslutningsutrustningen för mycket när du ansluter den med USB/USB kabeln med mikrokontakt.

## OSTRZEŻENIE

Nie zginaj na siłę wtyczki w urządzeniu, gdy podłączasz przewód micro USB/USB do złącza.



禁止

**充電するとき、micro USB/USB 接続端子に無理な力を加えない**

micro USB/USB 接続端子にて充電する際には、無理な力を加えないでください。斜めに差したり、差した状態でコード部を持ち、引っ張ると、端子部が故障・破損し、火災の原因となります。



Li-ion

**本機を廃棄する**

本製品に内蔵されている充電式電池はリサイクルできます。本機を廃棄する際は、当社お客様相談センターにご相談ください。

Product Name : Bluetooth headphones

Model Number : AH-GC20

This product FCC ID: BV2-AHGC20

This product IC: 10369A-AHGC20

Cet appareil IC: 10369A-AHGC20

 
For Canadian customers:

CAN ICES-3 (B) / NMB-3 (B)


# 1




# 3

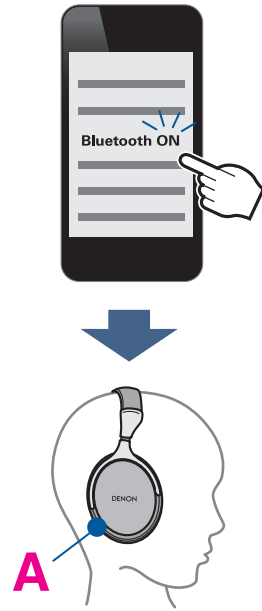



# 4

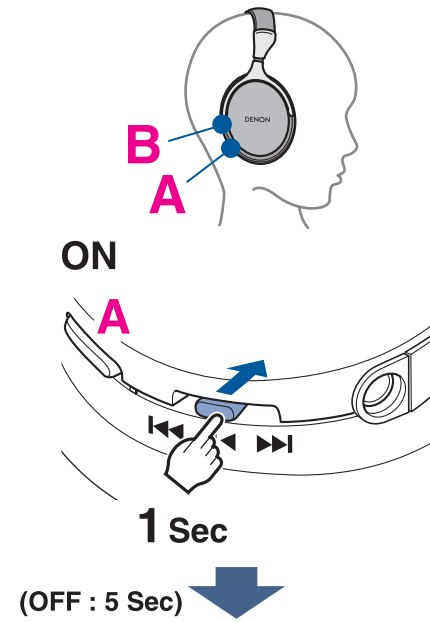 


# 5

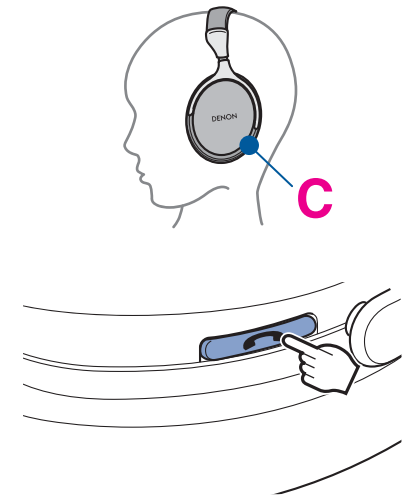 

# 2

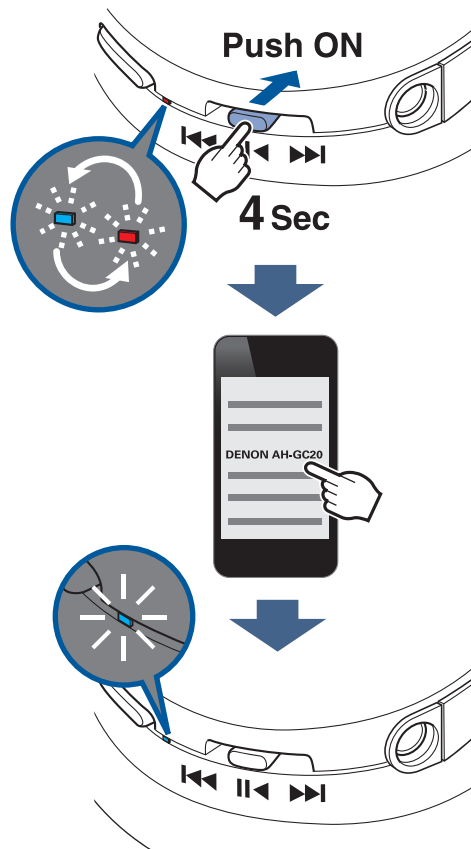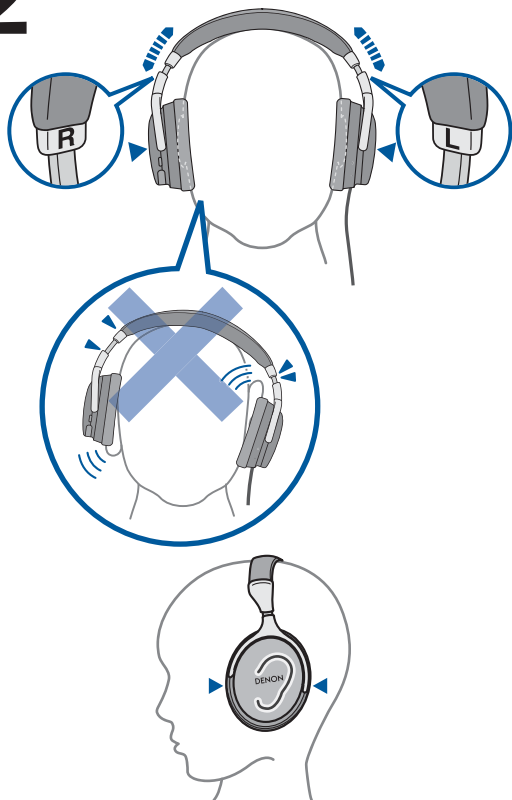  

# 6

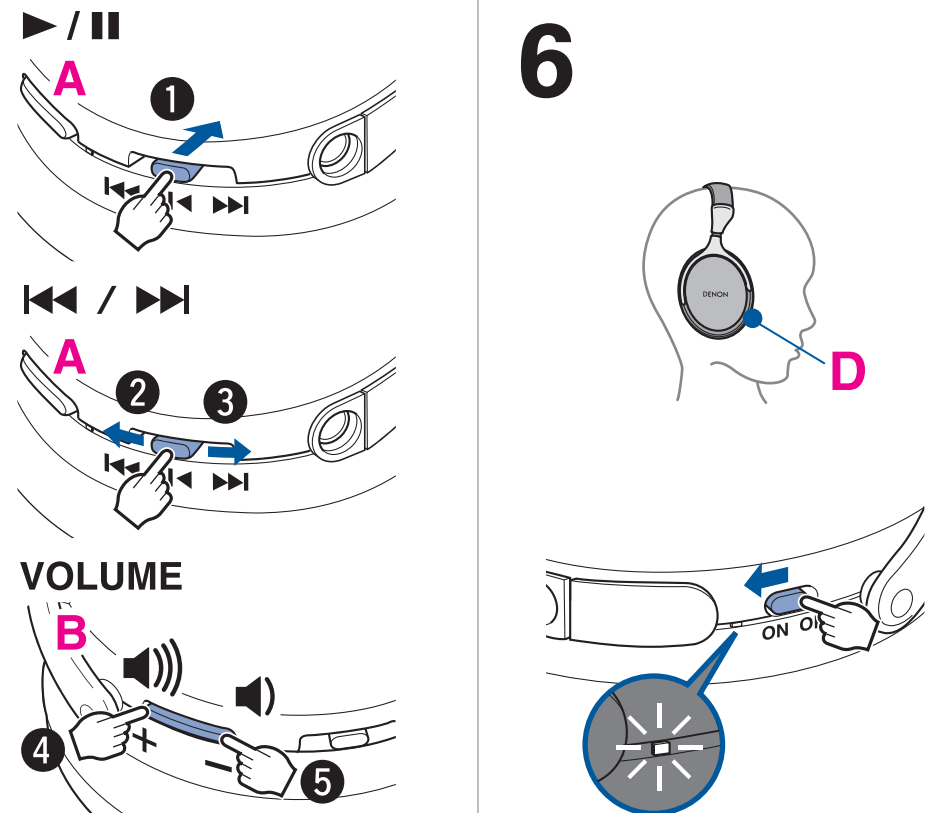 

## 1. Charging

Charge the headphones fully prior to usage by using the USB cable Included.

- 0 % to 49 % charged: Charging LED indicator slowly flashes red
- 50 % to 99 % charged: Charging LED indicator flashes red
- 100% charged: Charging LED indicator lights red

It will take approx. 2 hours from empty to full charge.

## 2. Wearing

Adjust the slider length to fit your head when wearing the headphones.

## 3. Pairing with Bluetooth device

Register (Pairing) a Bluetooth device to the headphones.

1. Activate Bluetooth function of the Bluetooth device to be connected.
2. With the headphones' Bluetooth function off, press and hold the control button for approx. 4 seconds. The red and blue LEDs will alternately flash, and the headphones will enter pairing standby mode.
3. Select the "DENON AH-GC20" appears on the Bluetooth device to be connected.  
The blue LED indicator will light up for approx. 5 seconds when pairing has been completed.

### Web Manual

Refer to the web manual for other functions information and operation procedure details, such as cable connection, remaining battery indication, Multi-point connection, Voice guidance, and so on.

Enter the following URL into your web browser:

[manuals.denon.com/AHGC20/ALL/EN/](http://manuals.denon.com/AHGC20/ALL/EN/)



## 4. Playback music via Bluetooth

Activate Bluetooth function of the Bluetooth device to be connected.

- ON: Press and hold the control button for approx. 1 second. The Bluetooth device registered on the headphones will be paired automatically.
- Operates the paired Bluetooth device using the control button.

<b>Play/Pause</b>	Press <b>①</b> one time	<b>Increase volume</b>	Press <b>④</b>
<b>Next track</b>	Slide to <b>②</b>	<b>Decrease volume</b>	Press <b>⑤</b>
<b>Previous track</b>	Slide to <b>③</b>		

- OFF: Press and hold the control button for approx. 5 seconds and longer. When the battery level is low, the LED indicator will flash red every approx. 3 seconds with a beeping sound. Please recharge the battery.

## 5. Phone Call

The headphones feature an easy hands free phone conversations.

Answering a call: When the phone rings, press the call button 1 time to answer.

Ending a call: Press the call button 1 time to end.

## 6. Noise Cancelling function

The Noise Cancelling function can reduce the surrounding noise level.

When the switch is turned on, the white LED indicator will light up.

### NOTES ON USE

To prevent the battery from draining, turn the Bluetooth and Noise Cancelling functions off after use.



## ITALIANO

Fare riferimento al manuale sul web all'indirizzo:  
[manuals.denon.com/AHGC20/ALL/IT/](http://manuals.denon.com/AHGC20/ALL/IT/)



## ESPAÑOL

Consulte el manual web en:  
[manuals.denon.com/AHGC20/ALL/ES/](http://manuals.denon.com/AHGC20/ALL/ES/)



## NEDERLANDS

Raadpleeg de webhandleiding op:  
[manuals.denon.com/AHGC20/ALL/NL/](http://manuals.denon.com/AHGC20/ALL/NL/)



## SVENSKA

Mer information finns i e-bruksanvisningen på:  
[manuals.denon.com/AHGC20/ALL/SV/](https://manuals.denon.com/AHGC20/ALL/SV/)



## РУССКИЙ

См. веб-руководство по адресу:  
[manuals.denon.com/AHGC20/ALL/RU/](https://manuals.denon.com/AHGC20/ALL/RU/)



## POLSKI

Patrz instrukcja internetowa pod adresem:  
[manuals.denon.com/AHGC20/ALL/PL/](https://manuals.denon.com/AHGC20/ALL/PL/)



DENON®

[www.denon.com](http://www.denon.com)

D&M Holdings Inc.  
5411 11241 00AD