



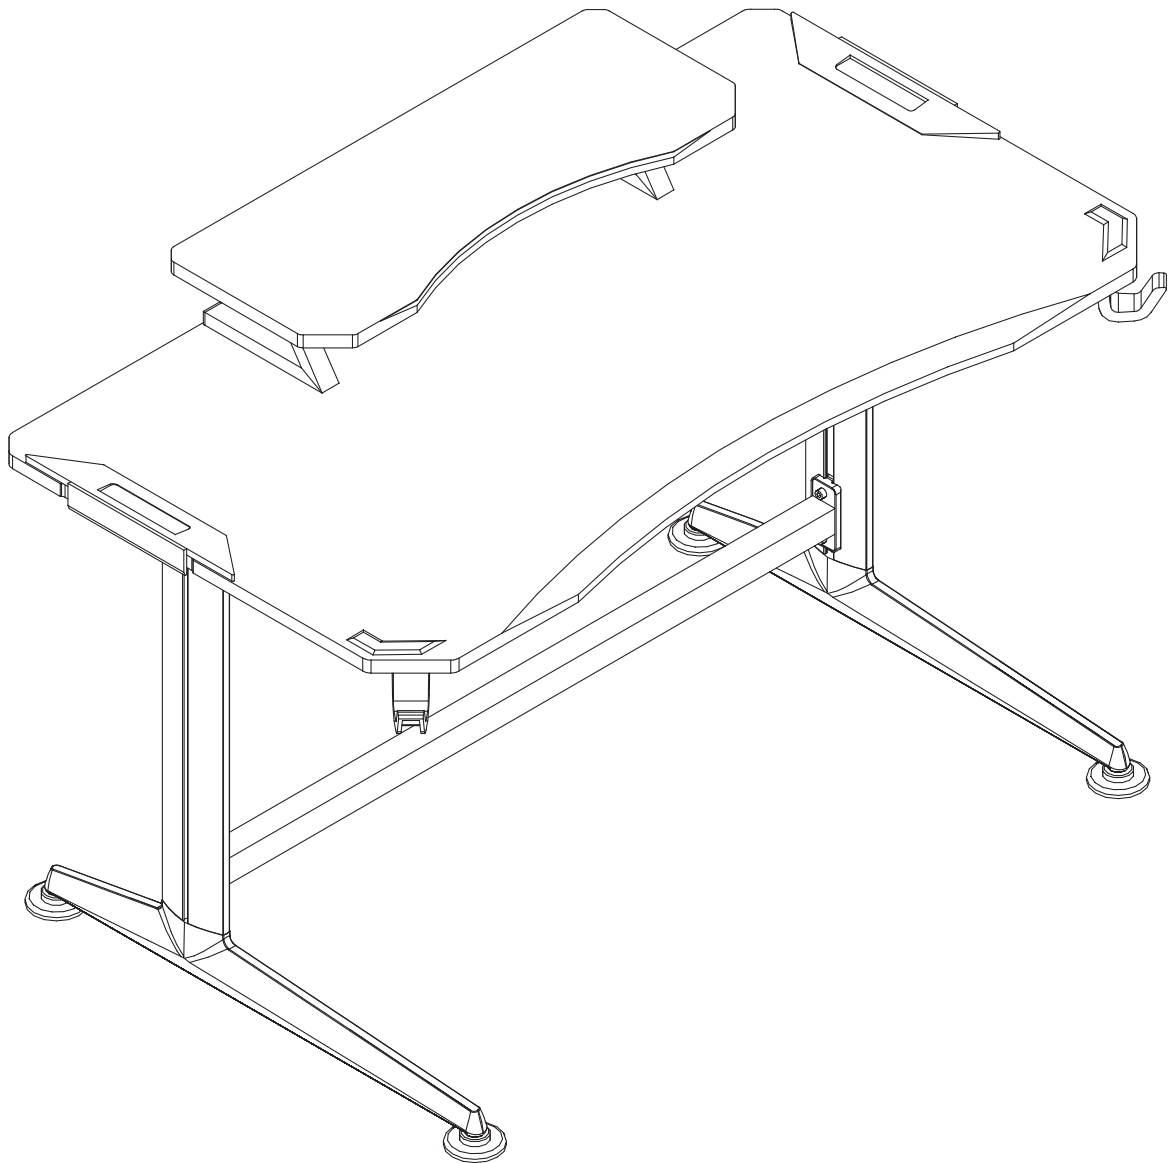


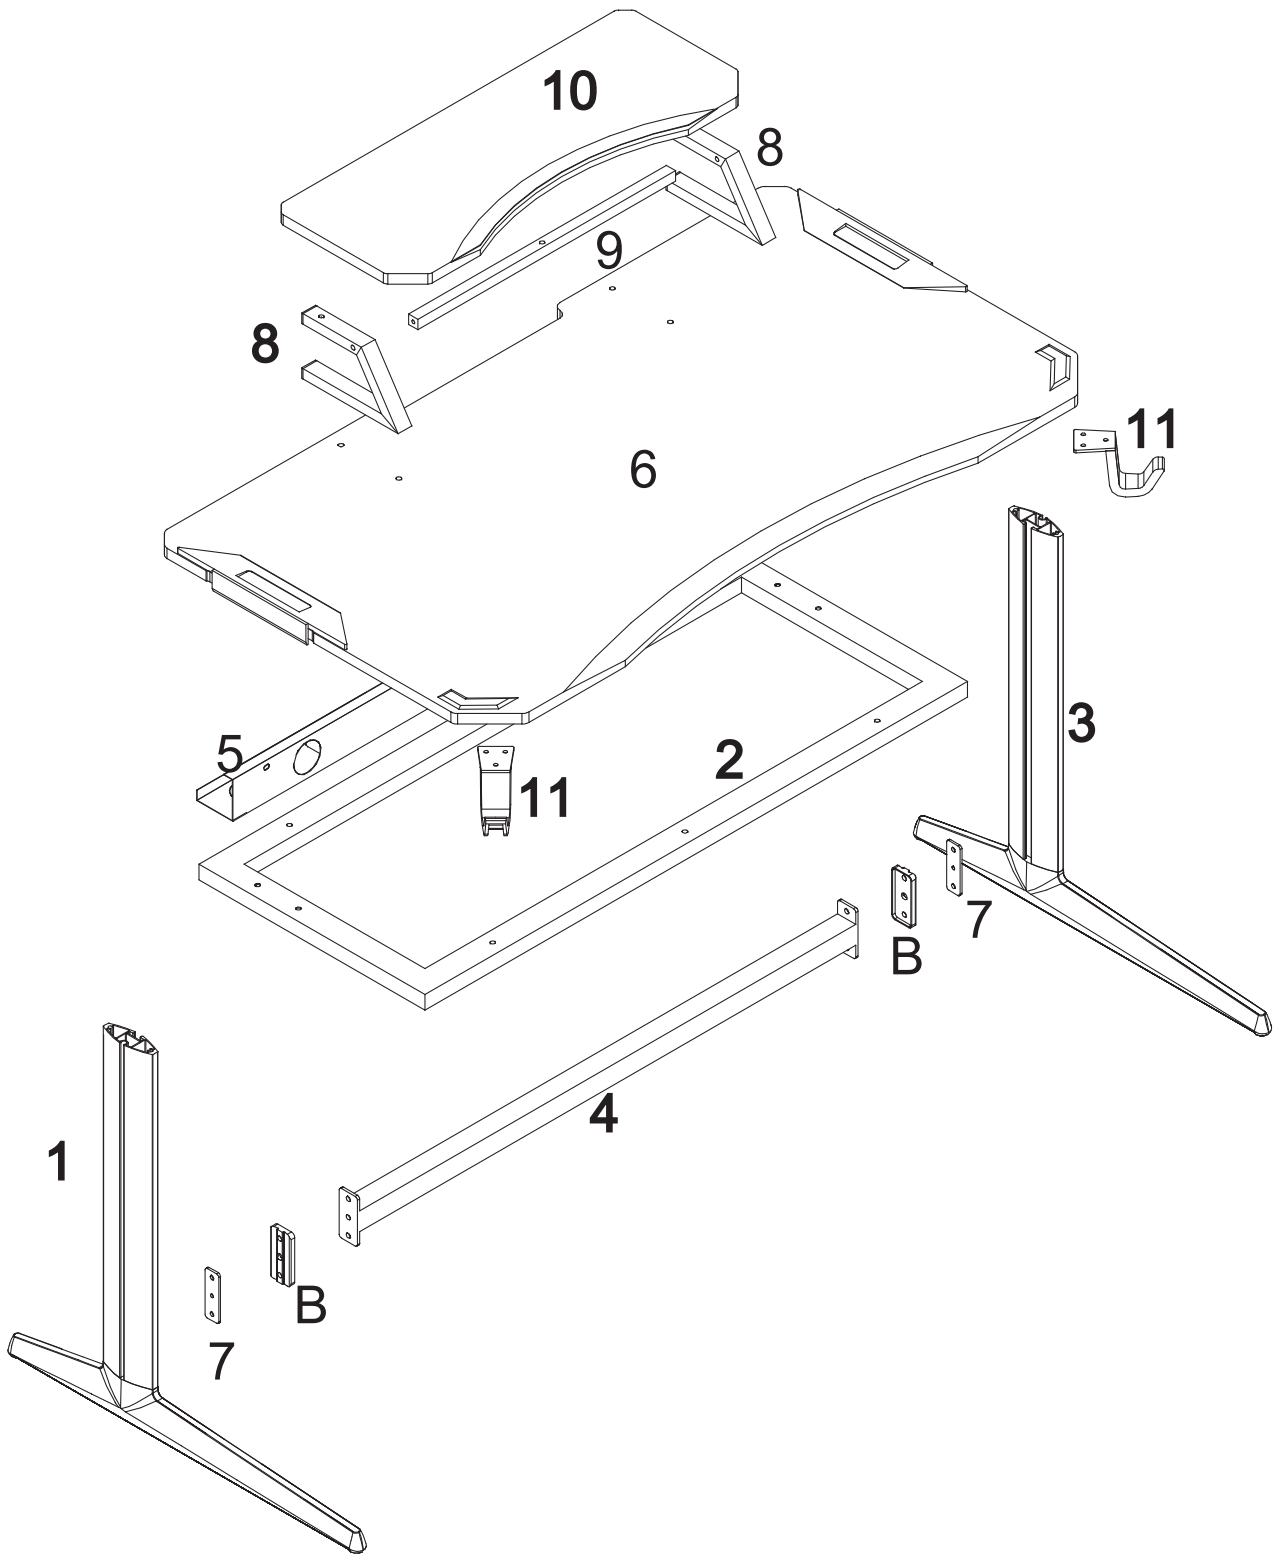







# Assembling Instruction

ITEM# :AA-1801(A)


Attention:Do not tighten the screws until all of them are in right positions






A			x4	F		M6x12	x8
B			x2	G		M6x35	x4
C		M8x15	x4	H		M6x30	x3
D		M8x20	x4	I		M6x45	x2
E		M6x40	x6			4mm	
							6mm


1

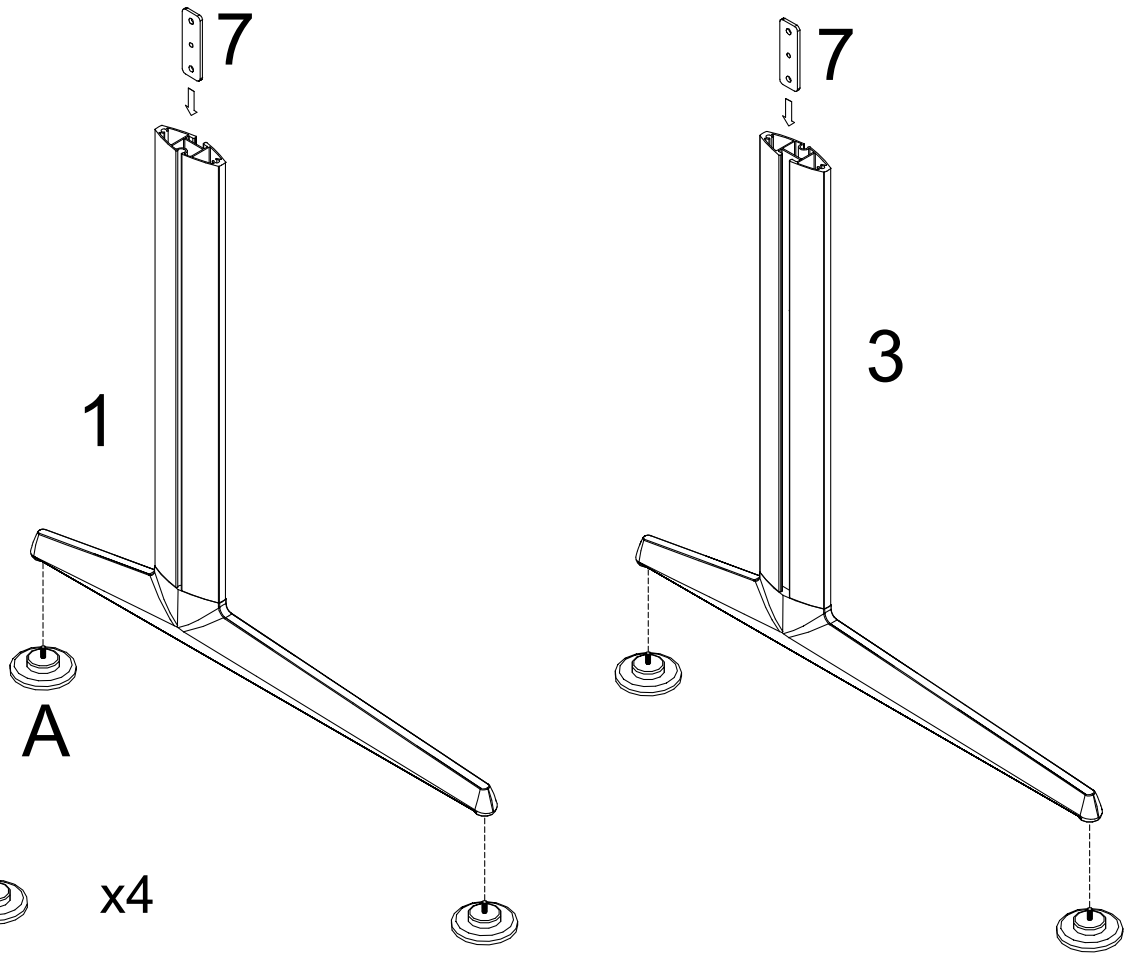


2

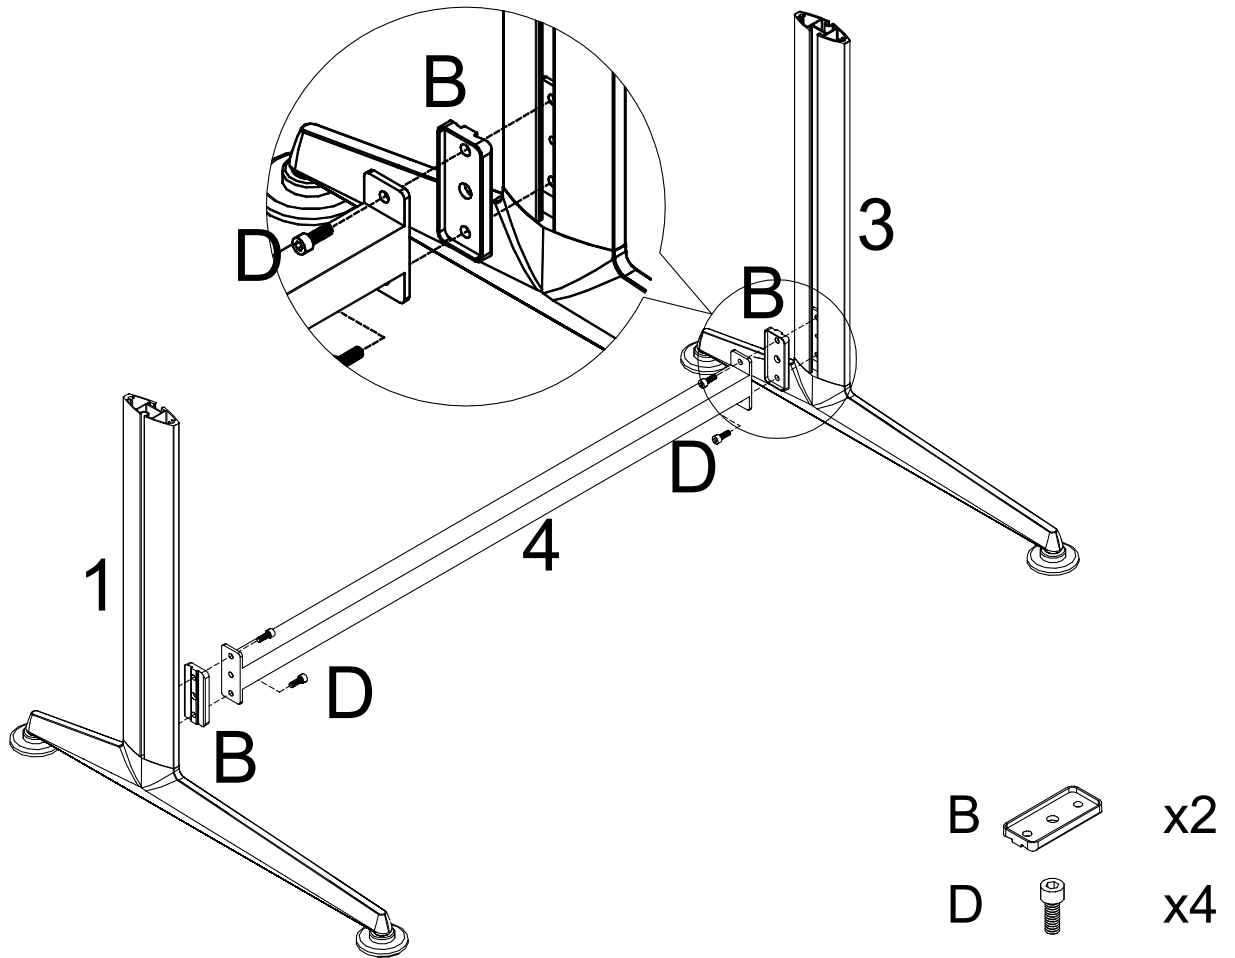


3

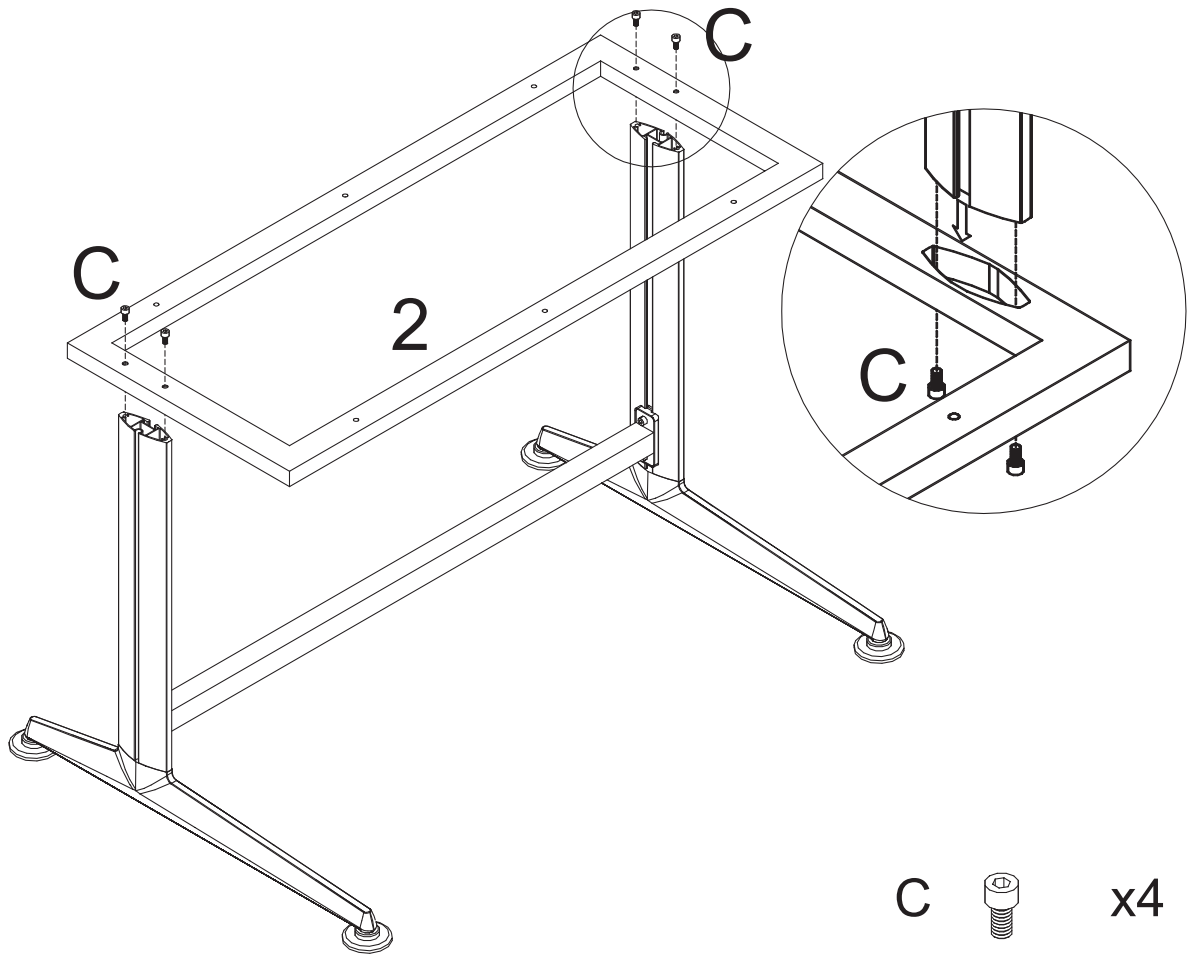


4

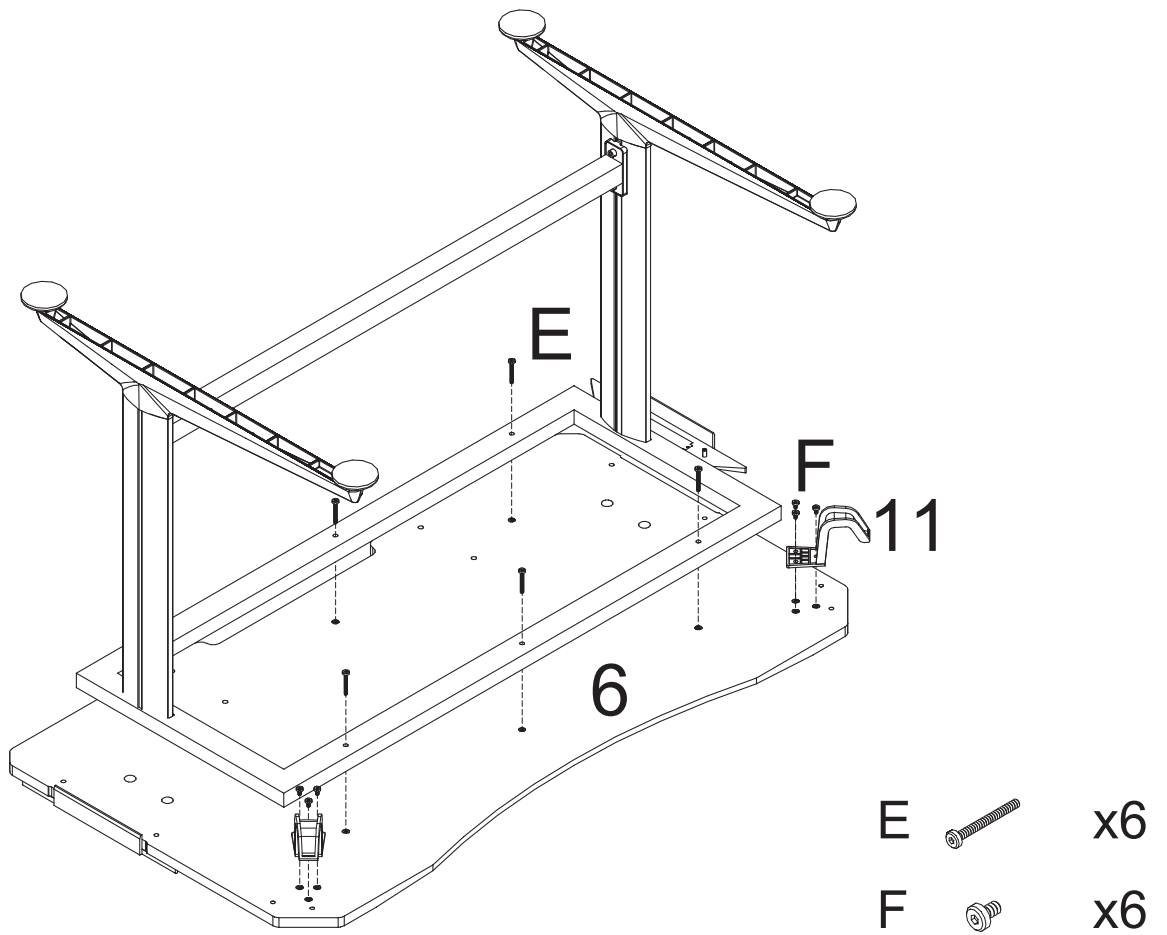

5

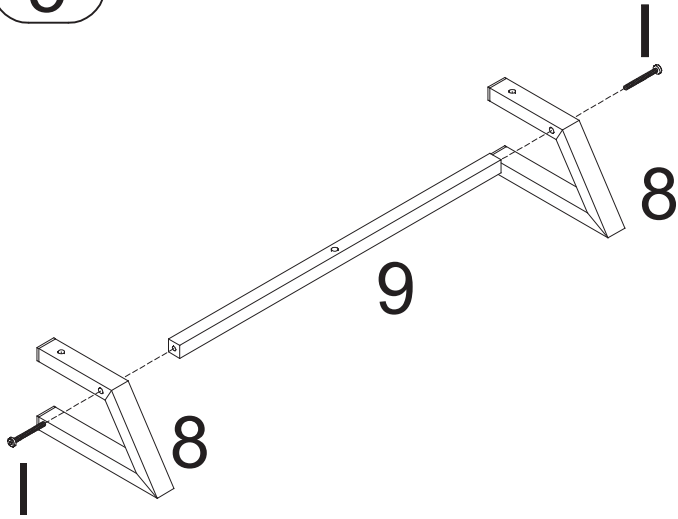


6

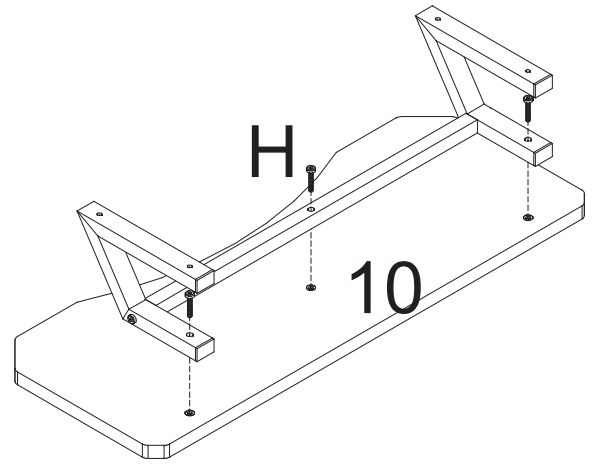

I  x2

H  x3

7

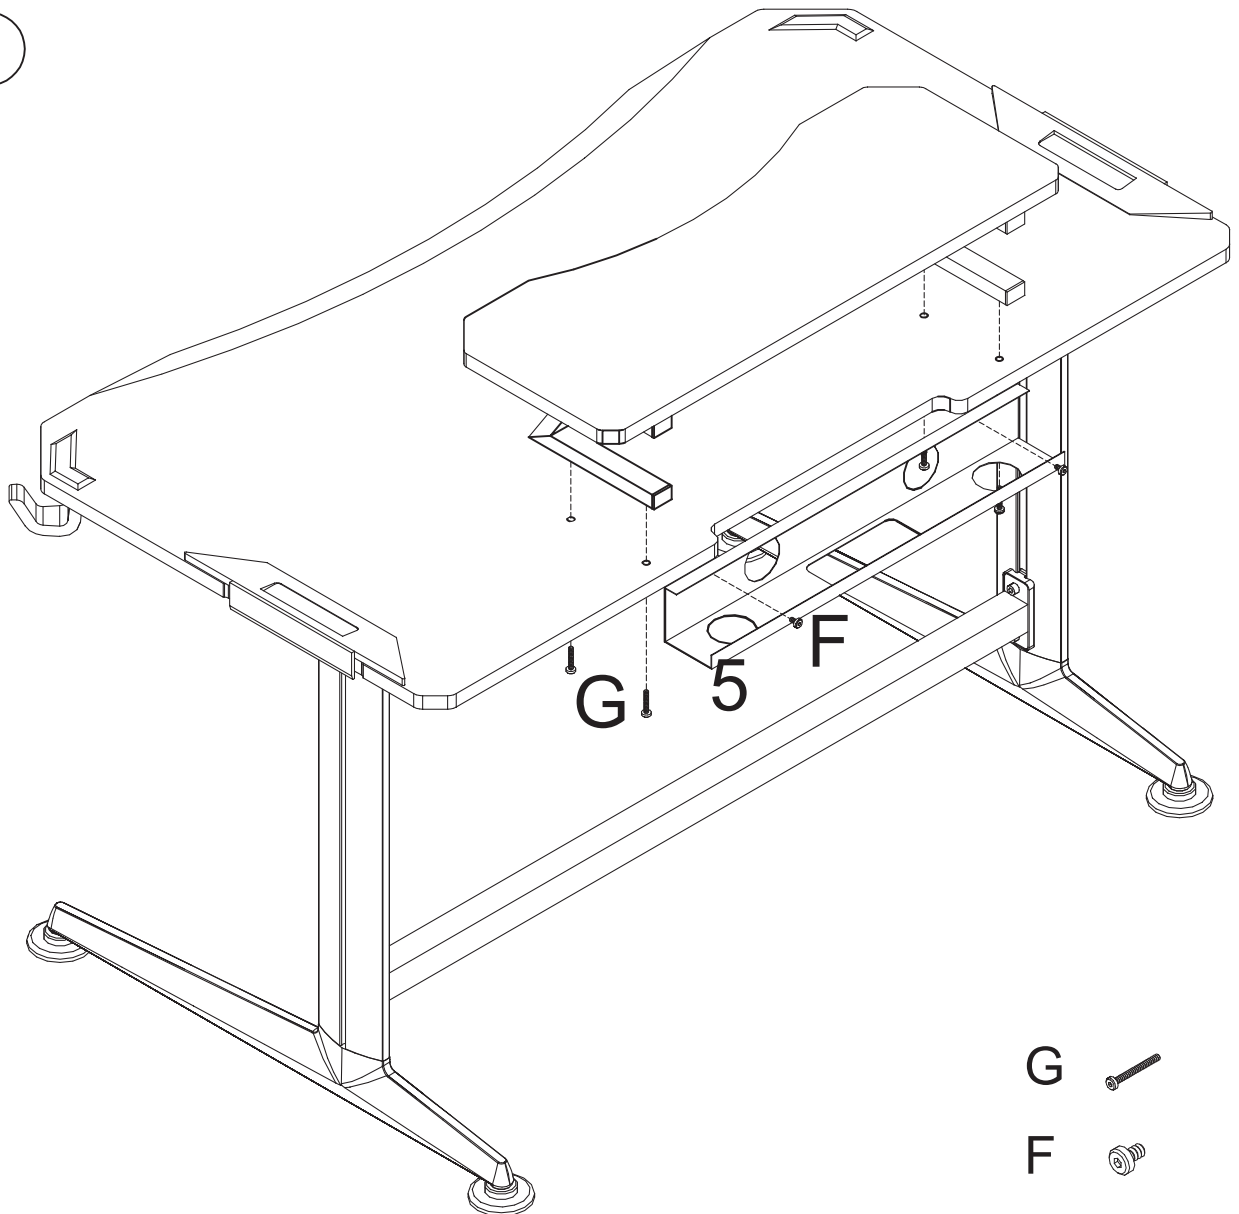

G  x4

F  x2